



## Smart home system Finn1, short instruction

Login <https://public.fmtech.se>  
 User and password can be found in the "black binder" flap 6.

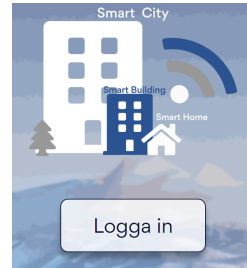

### Heating

Click room and change the "Bör" value (requested temperature). Please note that a change can take several hours. You can set a temperature of maximum 22.5 degrees. All thermostats on the walls are locked. Any changes must be made in the portal. Changes directly on the thermostats disables the control and low temperatures will be set.

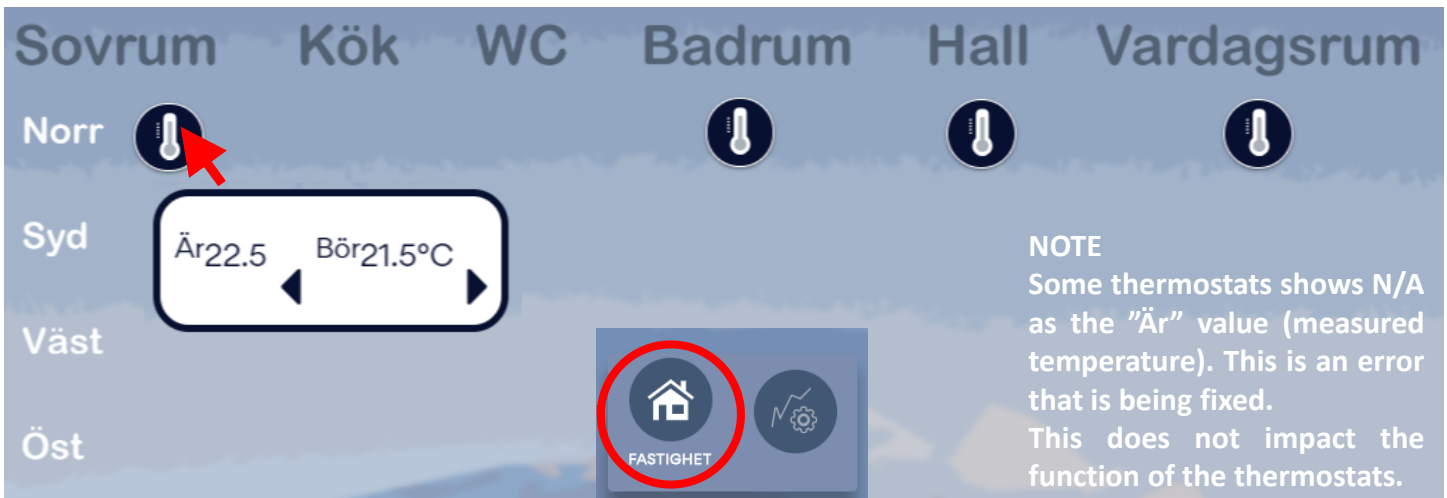

### Water

Choose statistics in the bottom of the screen. Warm and cold water consumption is shown per month in litres.

